



Clear Choice

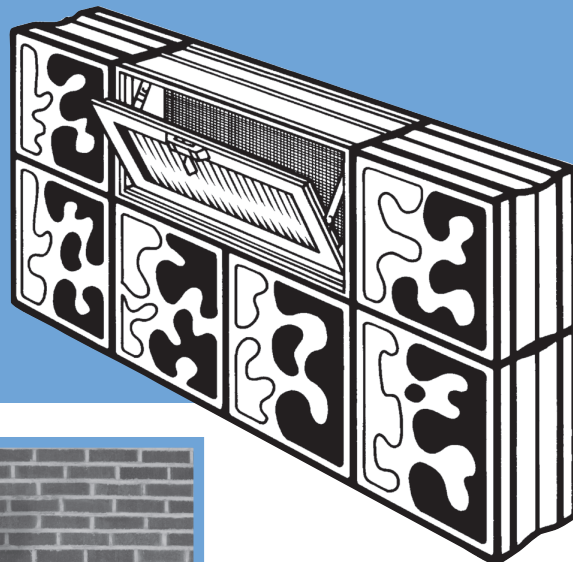


PRE-ASSEMBLED PANEL INSTALLATION INSTRUCTIONS FOR BASEMENT WINDOWS

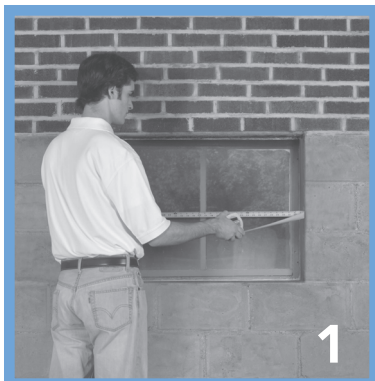


1

To make sure your new window will fit properly, measure the window opening as if the frame were already removed. You will need a space of approximately $\frac{1}{4}$ " to 1" all the way around the perimeter for mortar.

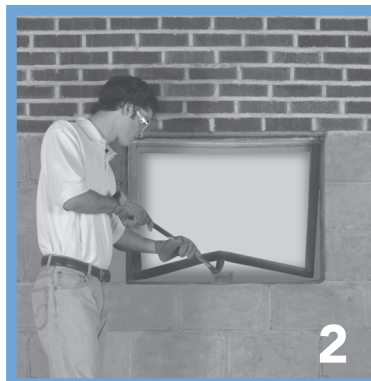


2

Remove the window sash and then remove the window frame by bending the top and bottom in toward the center or by cutting it. Remove the old mortar sill if necessary.

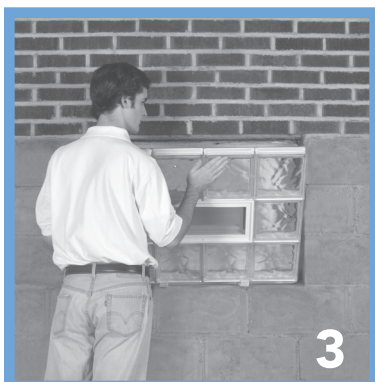


3

Set the new window into place on top of 2 wedges, check that it is plum and level, then secure it with 2 wedges at the top. If you are installing a vented window, the vent latch should be located on the inside at the top.

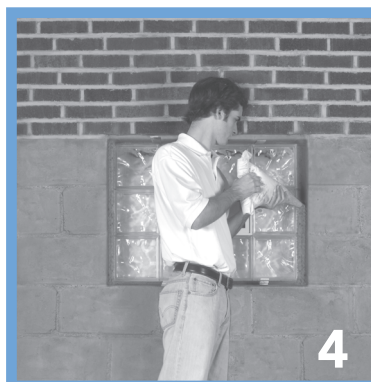

4

Mix the mortar according to the instructions on the bag. Apply the mortar around the perimeter using a grout bag or a trowel. Make sure the joints are completely full.

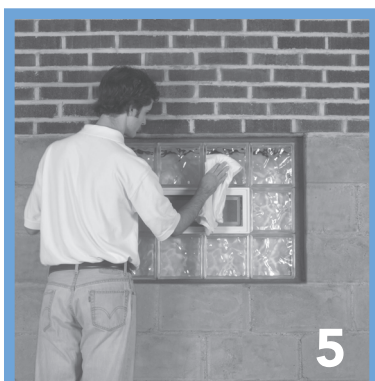

5

When the mortar begins to set, remove the wedges, fill the holes, smooth the joints with a trowel and clean the glass with a cloth.

These are general instructions, due to variations in window construction your installation may differ.

Tools & Materials List

- Safety Goggles
- Work Gloves
- Tape Measure
- Hammer
- Pry Bar
- Stiff Brush
- Wood Wedges
- Level
- Pre-mix Mortar
- Clean Water
- Trowel
- Bucket
- Grout Bag
- Clean Cloth

Quality Guaranteed

5-Year limited warranty against manufacturing defects

Thick, Break-Resistant Glass

Enhances home security

Thermal Efficiency

Reduces energy costs and helps keep homes comfortable

Privacy With Natural Light

Brightens rooms and eliminates the need for curtains

Efficient Sound Barrier

Reduces noise from outside and helps keep homes quiet

Versatile Window Solution

The ideal basement replacement window.
Great for bathrooms, kitchens, garages, door sidelights.